# BATTERY INFORMATION / PRECAUTIONS / CLEANING

• Unplug the game before cleaning it. Do not use liquid or aerosol cleaners. Use only a soft and damp rag.

Do not use the game while being in a bathtub, in a shower or a swimming pool. The immersion of the device may cause electrocution.

The housing of the device has ventilation slots and openings on the side. In order to prevent overheating, these openings should not be blocked by placing the device on a bed, sofa, rug or other similar surface. Never push objects in the slots and openings as they may touch dangerous voltage points or short out parts, which wculd constitute a risk of fire or electrocution. Do not spill any liquids into the device.

■ Do not expose the device to temperatures under -5°C (23°F) and over +35°C (95°F).

Batteries: do not throw the device or used batteries in a fire. Return used batteries to battery distributors intended for this purpose.

#### **TECHNICAL CHARACTERISTICS**

Size: length 42 x width 12 x height 3 cm Weight (approx.) : 1.7 kg / 3,75 lbs Materials: oak-veneered plywood, PLA bioplastic Battery: 1 battery of 3.7V Battery life: 4-5 hours USB charging Jack plug 3,5 mm Built-in speaker sound power: 10W (RMS) Bluetooth: 4.0





#### YOUR GAME

Lilémø relies on the curiosity and the observation skills of the child so that beginning readers can aradually learn. alone or in small group, letter recognition, rhyming, letter-sound articulation, blend phonemes, onset rimes and word building.

Kids 3 - 7 vo by teachers



Made in France



No Wifi

#### 1 game station

- 1 boot block
- 45 connected cubes

GAME CONTENT

- 60 magic cards
- USB power cable
- 1 QuickStart guide

Patent INPI n°1901178 Copyright 2019 @Lilylearn

102 bis rue de l'Arquette 14 000 CAEN - FRANCE

#### HELP

No **sound** issue :

- Turn up the volume
- The game may be off: re-plug the boot block

The battery may be discharged: recharge the battery with USB

Mv card is not read :

Remove and replace the card

A **cube** is not read :

Place the cube on another face

# Support

We are here to help you, do not hesitate to contact us.

support@lilylearn.fr

# START

Connect the boot block, Lilémø plays a music, the game is ready ! You can use headphones with the jack plug.

# **GAME MODES**

#### PLAY WITHOUT CARDS:

1. Place a cube. It talks.

2. Place other letter cubes side by side, Lilémø assembles the letter sounds

#### PLAY WITH CARDS:

1. Select a card among 3 levels:





1 digraph or magic E

Easv simple words one svllable

Challenaina one svllable or complex digraphs more with

2. Insert the magic **card** in the boot block slot:

- Image with word: to copy the word

- Image without word: advanced readers Lilémø reads the word !

3. Place your **cubes** to form your word. Lilémø sounds out the cubes combination, each time you place a new cube.

Press the ReRead orange button at any time !

4. Press the yellow button to check the word spelling. Lilémø plays a success or oops music.

# **GAME STOP**

To stop the game, simply remove the boot block.

**Eco-friendly** 



No screen